


# SLIDE MAINTENANCE

## Repairing the Slide assembly - ball bearing and retainer replacement


1. Remove the Inner Drawer from the Case.
2. Move Ball Bearing Retainer to the back of the slide.
3. With a flat head screwdriver pry up on the Ball Bearing Retainer to remove from slide.



4. Wipe clean old grease from top and bottom of slides including the ones still in the Cash Drawer Housing.

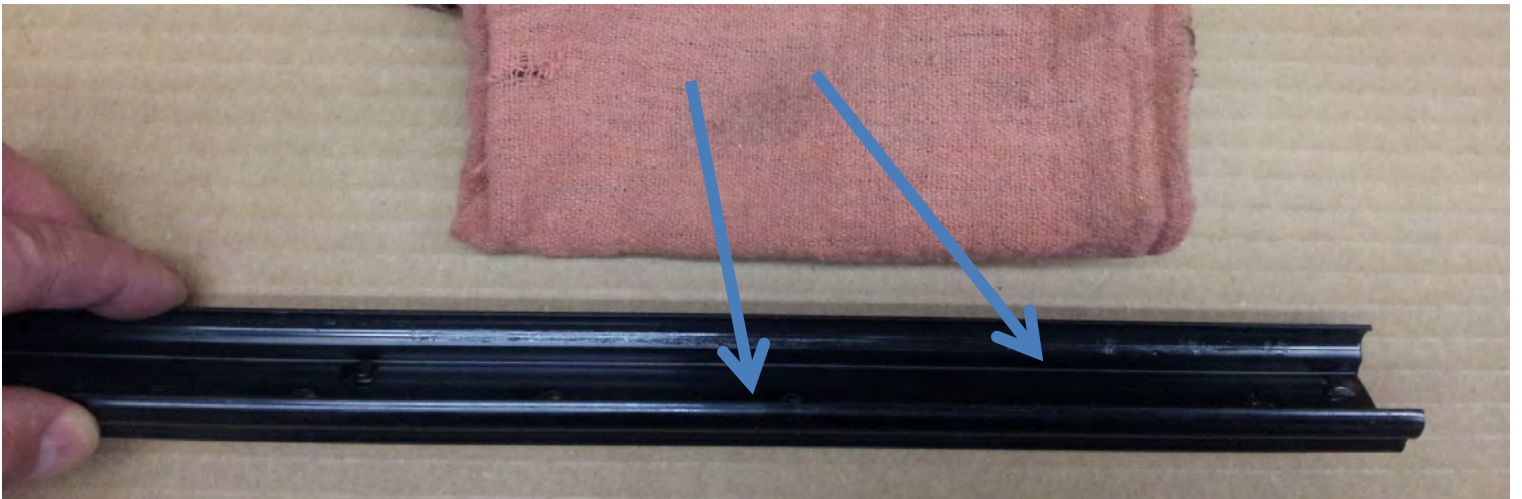

5. Insert 4 Ball Bearings into the new retainer as shown.

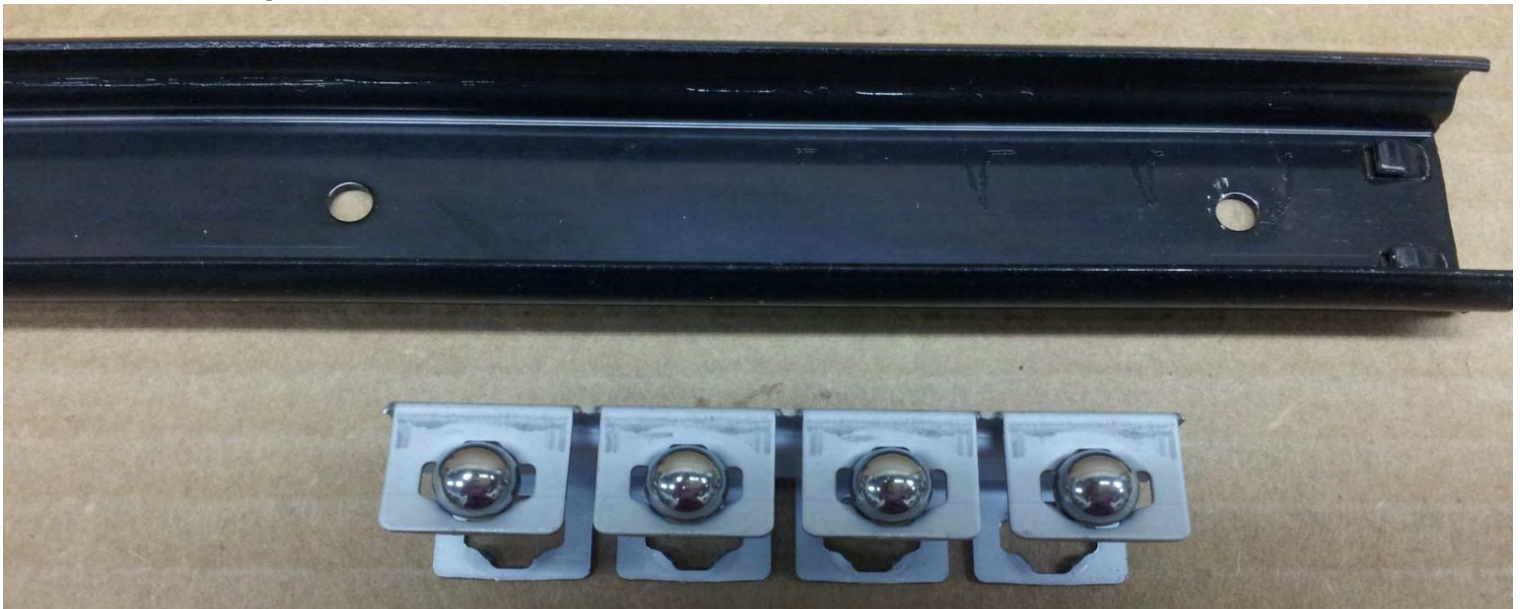




6. Insert the side with the Bearings into the slide as shown. Make sure to hold the Slide and Ball Bearing Retainer vertical to avoid dropping the Ball Bearings.



7. Now put the Slide Horizontal and insert the other 4 Ball Bearings.



8. With moderate pressure push down on the Ball Bearing Retainer securing it into the slide.

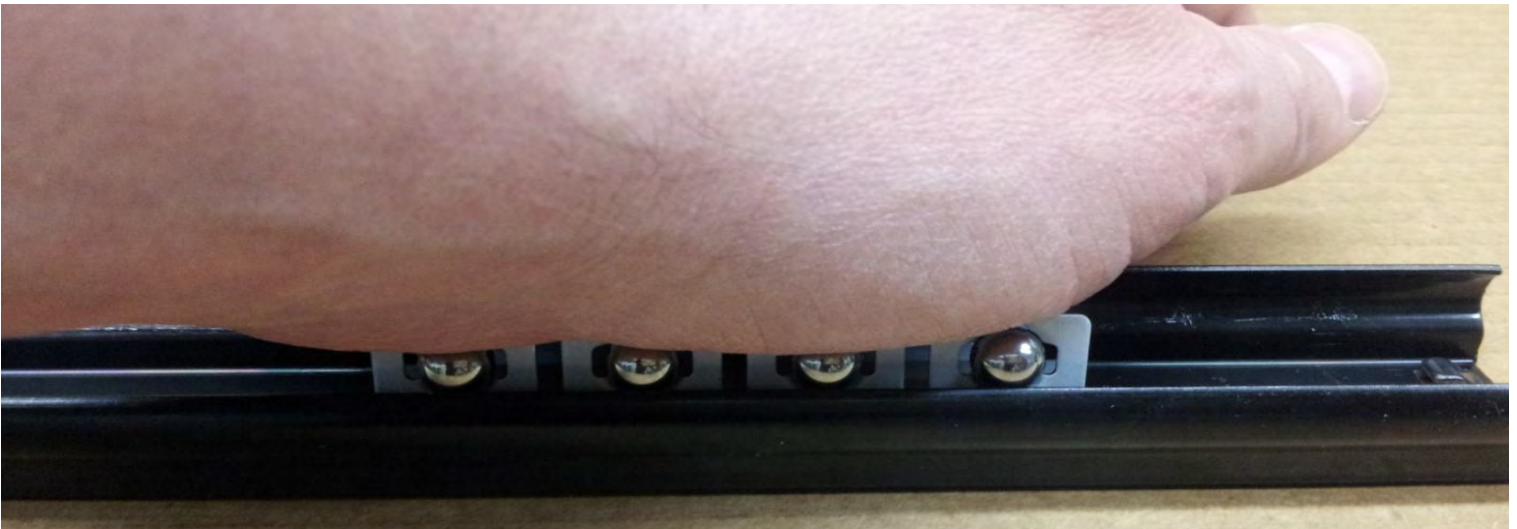

9. Reapply Grease to the top and bottom of Slide where old grease was removed from the outer slide.