





APG Cash Drawer Cable Part NO.: CD-D1D2

Connector A: Plug into 'DK' port on any printer


Connector B: Accepts Drawer 1 and Drawer 2 Cables to 320 interface cash drawers for the proper printer (e.g. CD-101A/B)

Set Status Phase High in printer driver.


Once installed, cash drawer status switches are in parallel and the printer can detect that a cash drawer is open only when both drawers are open.

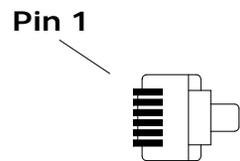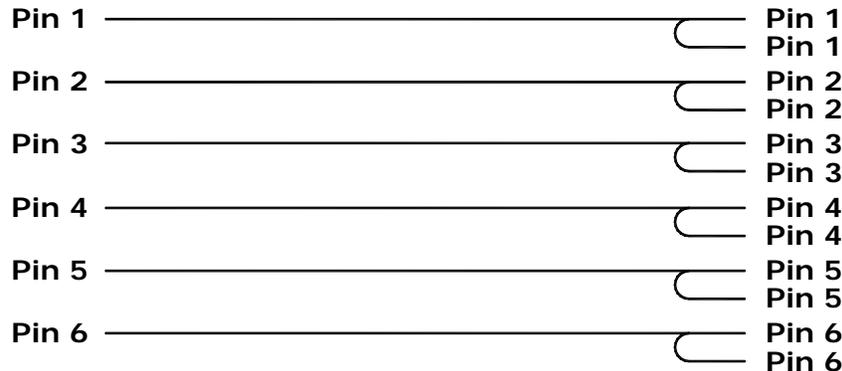

Connector A
6P6C Modular Plug

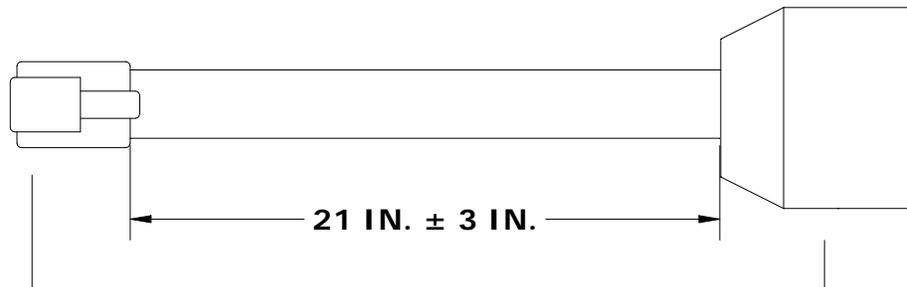

Connector B
Dual 6P6C Modular
Jacks with Integral
Molding

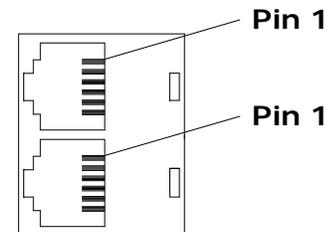



APG Cash Drawer Cable Part NO.: CD-D1D2EP

Connector A: Plug into 'DK' port on Epson printer

Connector B: Accepts CD-101A Drawer 1 and CD-101B Drawer 2 Cables to 320 interface cash drawers

Set Status Phase High in printer driver.

Once installed, cash drawer status switches are in series and the printer can detect that a cash drawer is open when either of them are open.

