 


APG[®] CASH DRAWER

SERIES 4000 4X4 CASH DRAWER

OPERATING & MAINTENANCE INSTRUCTIONS



GETTING STARTED

Prepare a location for the cash drawer. Recommendations for a suitable location include:

- A sturdy, level surface no less than the size of the cash drawer;
- Operating temperature from 32° F to 122° F (0° C to 50° C);
- Non-condensing relative humidity from 10% to 95%.

LOCK FUNCTIONS (If applicable)

Two keys are included with each cash drawer for the manual lock. The key lock provides four functions: locked open, manual open, electrically on-line, and locked closed. See Figure 2. The key may be removed in the 12 o'clock (Electrically On-Line), 9 o'clock (Locked Closed), or 3 o'clock (Locked Open) positions. To reduce the risk of damaging or breaking the key, remove the key from the lock during normal operation.

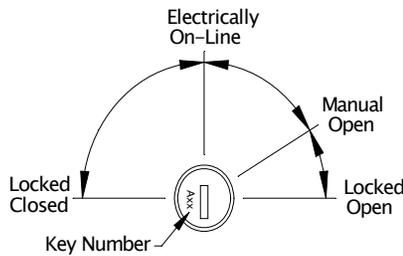


Figure 2

MEDIA STORAGE

A media storage area is located below the till.

PARTS AND ACCESSORIES

For cash drawer parts and accessories, contact your supplier or visit our website at <http://www.apgcd.com>.

REMOVING THE INNER DRAWER: PRODUCT STARTING WITH JB** OR JD**

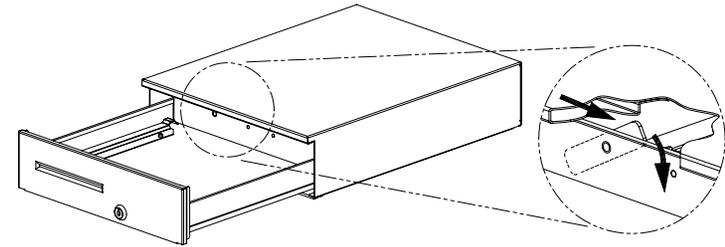


Figure 3

Open the drawer and remove the plastic money till. Rotate the swivel pivot stop, mounted to the back outside surface of the inner drawer, to a horizontal position. Pull the drawer out.

REPLACING THE INNER DRAWER

Mate the outer slides (*mounted to the drawer*) with the inner slides (*mounted in the cash drawer housing*). Push the drawer in, rotate the swivel pivot stop to a horizontal position and push the drawer in a few inches. Allow the pivot to swivel to the vertical position and push the drawer to the fully closed position. You should experience resistance as you close the drawer since the ball bearings do not roll until the slides are fully engaged. When the inner drawer is fully inserted, cycle it a few times to verify that the drawer opens and closes properly.

PREVENTATIVE MAINTENANCE


The cash drawer slides should be periodically cleaned and lubricated. Frequency is dependent on use and the environment. Using a dry, lint free cloth, wipe out the old grease and debris from the inner and outer slides. Do not use water or any type of liquid cleaner. Using a clean applicator, apply a thin layer of lithium-based bearing grease to the inner and outer slides. Cycle the slides several times to properly coat the ball bearings and to spread the grease evenly.

CAUTION: Breaking coin rolls on the money till may cause the plastic to fracture.




ACCESSORIES


PK-15-4X4VTA-BX
4X4 VALUE TILL
12 3/8" x 11 1/8" x 2 5/16"

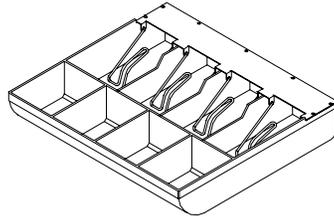


PK-15J-DC-BX
COIN CUP

 


PK-14P4-R-BX
LOCKING TILL COVER
KEYING AVAILABLE MM101-MM104

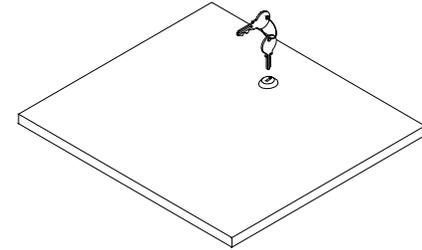


VPK-15B-1A-BX TILL
ADJUSTABLE 4 BILL 5 COIN TILL
12.65" X 11.70" X 2.20"

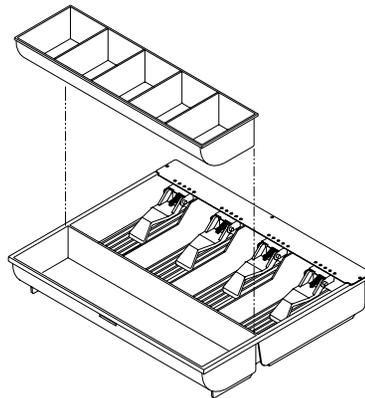


VPK-15B-4A-BX TILL
ADJUSTABLE 4 BILL 8 COIN TILL
12.65" X 11.70" X 2.20"

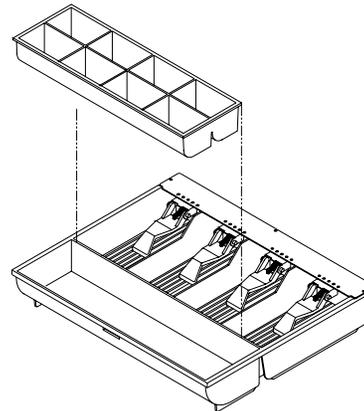

VPK-14B-3A-BX TILL
TILL LID

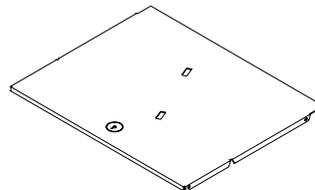

PK-27-06-BX
UNDER COUNTER MOUNTING
BRACKET KIT

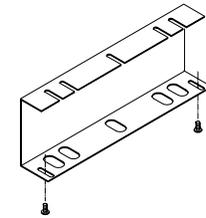

Kit includes two brackets, cash drawer mounting hardware and installation template.